

Table of Contents

Safety Precautions.....	2
Electrical Safety.....	3
Overview Drawing.....	4
Parts List.....	4
Assembly Instructions.....	5
Operating the Controller.....	6
Workout.....	7

Safety Precautions

Read all instructions carefully before operating this product. Retain this owner's manual and keep all original transaction receipts for future reference.

- Consult your physician before beginning this or any other exercise program.
- If you experience any irregular physical conditions such as dizziness, severe muscle or joint pain or pain in the chest, stop exercising and consult with your physician immediately.
- Keep children and pets away from the machine while in use.
- Do not operate this or any exercise equipment if it is damaged.
- Set up Pedal Exerciser as directed in Assembly Instructions and place unit on a level, non-slip surface.
- Keep hands and feet away from any moving parts. Do not insert any objects into any openings.
- Perform 3 to 5 minutes of warm-up and stretching before beginning your exercise.
- Never exercise to exhaustion.
- Do not stand on the Pedal Exerciser, only exercise in seated position.
- Keep a minimum safety clearance during operation. The Pedal Exerciser is designed as a home use exercise device. User must have full control of their muscles to operate this unit. It may not be suitable for people who are quadriplegic or paraplegic. Please consult your doctor or physician.
- Exercise equipment is to be regularly inspected for maintenance for loose or broken parts.
- This product is for consumer use only.
- Wear comfortable and suitable clothing when using Pedal Exerciser.
- Each exercise should be performed in a controlled manner. Always start exercising slowly.
- Have the unit serviced by a qualified service technician. Do not attempt to service the unit yourself.

Warning: The Pedal Exerciser is designed for seated position use on a flat and stable surface.

Electrical Safety

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this unit.

 
WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating may occur and cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this unit is used by or near children, physically challenged or disabled persons.
- Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this unit if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle.
- Keep the cord away from heated surface.
- Never operate the unit with the air openings blocked; keep the air openings free of lint.
- Never drop or insert any objects into any openings.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn the speed and resistance knobs to the off position, then remove plug from outlet.
- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- For Household Use Only.
- Power requirement: 220VAC

Storage Precautions:

Do not store the unit in any place where it will be subjected to high or low temperatures. Do not expose to direct sunlight for extended periods of time. Do not store the unit in a humid or dusty area.

Overview Drawing & Parts List

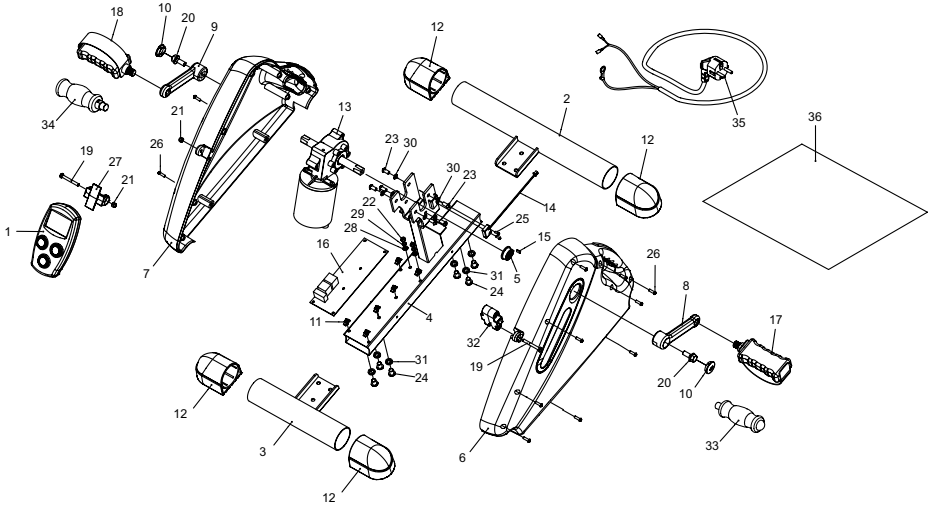

(24) Bolt M8 x M12



(31) Spring Washer





Wrench



Allen Wrench

Part #	Description	Q'ty	Part #	Description	Q'ty
1	Controller	1	19	Bolt M5x40mm	2
2	Rear Stabilizer 380	1	20	Bolt M8x20mm	2
3	Front Stabilizer 220	1	21	Nut M5	2
4	Main Frame	1	22	Bolt M5x10mm	2
5	Magnet Bracket	1	23	Bolt M6x12mm	6
6	Right Cover	1	24	Bolt M8x12mm	6
7	Left Cover	1	25	Screw ST2.9x10	2
8	Right Crank	1	26	Screw ST4.2x15	11
9	Left Crank	1	27	Controller Bracket A	1
10	Plastic Cap	2	28	Washer	2
11	PCB Support	6	29	Spring Washer	2
12	Stabilizer End Cap	4	30	Spring Washer	6
13	Motor	1	31	Spring Washer	6
14	Square Sensor	1	32	Controller Bracket B	1
15	Square Magnet	1	33	Right Handgrip Pedal	1
16	Power Control Board	1	34	Left Handgrip Pedal	1
17	Right Foot Pedal	1	35	AC Power Cable	1
18	Left Foot Pedal	1	36	Non-slip Mat	1

  Assembly Instructions

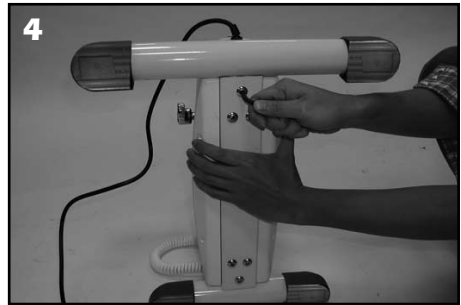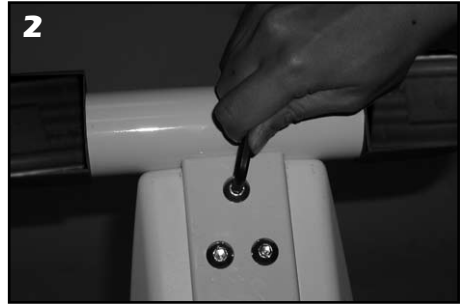

1. Hold the unit in an upright position. The Controller side facing up and the AC Power Cable side facing down. Insert the Front Stabilizer (3) into the Main Frame (4).
2. Attach the Front Stabilizer (3) to the Main Frame (4) with three Bolts (24) and three Spring Washers (31).
3. Insert the Rear Stabilizer (2) into the Main Frame (4).
4. Attach the Rear Stabilizer (2) to the Main Frame (4) with three Bolts (24) and three Spring Washers (31).
5. Connect the Left Foot Pedal (18) to the Left Crank (9) assembly. Thread it into the crank assembly in a counter-clockwise direction by the tool provided. (See figures 5 and 6). Connect the Right Foot Pedal (17) to the Right Crank (8) assembly by threading it in a clockwise direction. Note: The left/right pedals and left/right cranks are marked with with "L" and "R" (left and right).

Operating the Controller



Button Function:

MODE: Press MODE button to select function display.

UP: To increase the rotational speed of the pedal. The RPM levels vary from level 0 to 5.

DOWN: To decrease the rotational speed of the pedal. The RPM levels vary from level 5 to 0.

RPM LEVEL (ROTATION SPEED LEVEL)	RPM (UNLOADED)
0	0 (STOP)
1	20 ~ 25
2	30 ~ 35
3	40 ~ 45
4	50 ~ 55
5	60 ~ 65

Display Function:

SCAN: Displays each function for 6 seconds.

TIME: [0:00~99:59] Displays the time remaining or the time elapsed in your workout. You may also set exercise time for your workout. Press MODE button to select TIME function and then press and hold MODE button for 2 seconds. TIME will flash for setting exercise time. Press MODE button to set exercise time. Each increment is 1 minute. The set exercise time ranges from 5:00 to 30:00 minutes. Once you set exercise time and press UP button to start exercising, time counts down to 0:00 per 1 second backward. The speed of pedal revolution can be adjusted by pressing the UP or DOWN button on the controller. When exercise time counts down to zero, controller will alarm for 8 seconds and pedals will stop revolving automatically. The STOP sign will flash on the screen of the controller. Pressing the MODE button once, the STOP sign will stop flashing. After pressing the UP button, you can start exercising again.

RPM: [0~10~99] Displays the current RPM (Revolutions Per Minute) level.

COUNT: [0~9999] One increment for each pedal revolution.

CALORIES: [0~9999 KCAL] Estimated calories burned during exercise.

To select function display: Press MODE button.

To rest all values, press and hold MODE button for 2 seconds (when it is not in TIME function).

The monitor will turn off automatically when stopping exercising for over 4 minutes.

Workout

Workout Pricipal

1. Personal goals can include shaping, strengthening, improving present fitness level, rehabilitation of previous injuries, cardiovascular exercising, etc... By using the Pedal Exerciser correctly and on a regular basis, you can achieve your goals.
2. Available time is a major element in determining what we do in our daily lives. If you can only exercise for 15 minutes, develop a 15 minute program with the Pedal Exerciser.
3. Exercising and working out on the Pedal Exerciser should be an enjoyable part of your daily life.
4. Focus on the exercises. No matter what your present level of fitness, you can complete each exercise in a short range of time and sense the increased level of strength and endurance.
5. Always start exercising slowly, to warm up muscles.
6. The design of the Pedal Exerciser allows you to exercise your muscles with natural and efficient movements.

The Overload Principal

In order for you to strengthen your body, you must develop a series of exercise workouts each day. When you work out on a regular basis, your body (specifically your muscles), adjust to the new level of workout. This is called "increasing local metabolic efficiency". As a result, your muscles work better and you get stronger. If you keep working at the same level of metabolic efficiency, you can't improve muscle efficiency. So from time to time, you need to increase the frequency and/or duration of the exercise. Thus, in order to improve your fitness level, you must progressively increase your work load to reach your personal goal.

How to use your Deluxe II Pedal Exerciser.

The Deluxe II Pedal Exerciser can only be used after the power cord is plugged into the electrical outlet. Do NOT use the Deluxe II Pedal Exerciser without the power plugged in as this will damage the equipment. When using the Deluxe II Pedal Exerciser, the proper way to exercise is to set the desired rotational speed of the pedal (RPM level) by pressing the UP or DOWN button on the controller, and then following that speed to get the best results. Pedaling at excessive speed or applying excessive force will activate the overload protection circuitry to stop the motor, allowing the user to retract feet/hands. The motor will turn off for 2-3 seconds and then turn on again automatically. If the motor overload situation persists (motor turns off and then turns on) for 10 times, the motor will stop working completely, which may cause motor damage. The STOP sign will flash on the controller and the controller will alarm for 8 seconds. Press the DOWN button until the RPM level reaches 0. Then you may press the UP button to start exercising again.

Workout

Range of motion and flexibility

This device can be used for both upper and lower body. As a lower body device, it works with passive motion to increase tone of the quadriceps muscles (muscles in the thigh) and circulate blood flow to the entire lower leg and foot. For upper body use, it is used as a resistance device, allowing the user to exercise the muscles of the arm (biceps, triceps, deltoids and the smaller muscles of the forearms).

Routine

People vary in how they adapt to repetitive exercise. In developing an exercise routine, pay attention to how you feel, especially after an exercise is completed. You may feel tired but you should not feel exhausted. When you first start exercising, the principal muscles you use will ache slightly, especially the next day. However, they should not hurt to cramp. No matter what the recommended exercise routine, never exercise beyond the point of discomfort.

For the first two weeks, you should begin with 5-10 minutes once a day at a low speed. After the first two weeks, you can increase the time on the device to 15-20 minutes as you become more accustomed to the exercise. The speed can also be increased once you have adapted to the device. Longer periods of exercise will result in greater gains.

Leg Exercise

Place the Pedal Exerciser on a non-slip mat and sit comfortably in a chair, the device directly in front of you. The knee joint should not be flexed less than 90 degrees. Wear rubber soled shoes and adjust foot pedal straps to the proper length. Barefooted use of the Pedal Exerciser is not recommended.

WARNING

Do not stand on the unit to exercise. Only exercise in a seated position. Make sure the seat does not move or pivot. Do not sit in a chair with casters.



NOTE: Use the foot pedals (17/18) for leg exercises.

Arm Exercise

Place the unit directly in front of you on a table top. Be seated in a comfortable chair, so you can easily reach the hand grip pedals without hyper extending (over straightening) the elbow joint. This can be accomplished by either placing a cushion on top of the seat or by moving the unit closer to the user.

NOTE: Use the hand grip pedals (33/34) for arm exercises.



Produced for and distributed by:
MSD Europe bvba
Nijverheidsstraat 18
1840 Londerzeel
Belgium - Europe
www.msd-europe.com

© 2009, MSD Europe bvba. All rights reserved.